

Clients

At the system administrator level, clients may also be edited, to set the trunk group used by default for outbound access.

Note: this setting is particularly important in a multi-tenant installation, where none of the trunks should be configured with "**Outbound general access**".

On the "Options" page of the client, the setting "Outdial Trunk Group" can be modified accordingly.